


## How to change display range on AD unit



1) Remove two screws from **both** sides.

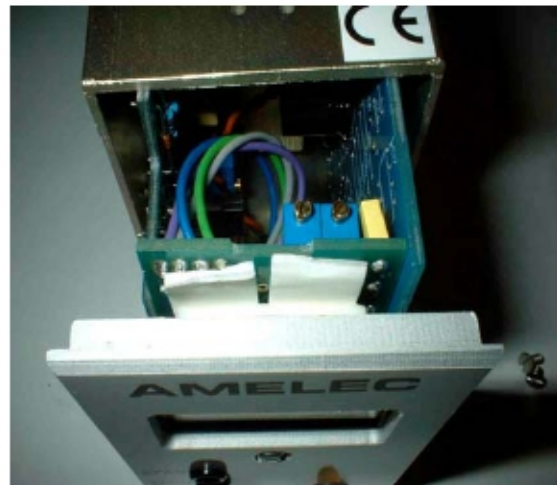

2) Pull the PCB assembly out slowly as shown above.



3) Re-range the display using the two potentiometers shown above.

### Procedure:

1. Before powering up the unit ensure the side of the PCB's are not touching the case. It may be safe to piece of cardboard on both sides to avoid accidental contact to the case whilst the unit is powered up.
2. Apply 0% (4mA) input and adjust RZ for required 0% reading. E.g. 000.
3. Apply 100% (20mA) and adjust RS for required 100% reading. E.g. 250.
4. Repeat steps 1 and 2 until no further adjustment required.